

STELTEC

V1.1-2026-02



STE-BGO-5120



STE-BGO-5120 Operation Manual

CONTENTS

1. Technical Specification	1-2
2. Safety Information	
2.1 General Safety	3
2.2 Personal Safety	3-4
2.3 Electrical Safety	4-6
2.4 Transportation Safety	6
3. Product Overview	
3.1 Brief Introduction	7
3.2 Interface Introduction	8
3.2.1 Switch ON/OFF	8-9
3.2.2 LED Indicator Definition	9-10
3.2.3 COM/ LINK-IN/ LINK-OUT Port	10
4. Installation guide	
4.1 Checking Before Installation	11
4.1.1 Checking Outer Packing Materials	11
4.1.2 Checking Deliverables	11
4.2 Tools	13
4.3 Installation environment requirements	13
4.3.1 Installation carrier requirements	13
4.4 Installation Instructions	14
4.4.1 Dimensions	14
4.4.2 Installation Procedure	15-22
5. Commissioning Procedure	23
6. Maintenance	
6.1 Recharge Requirements During Normal Storage	24
6.2 Recharge Requirements When Over Discharged	24

1. Technical Specification

Product type	Focus-L2					
Number of Battery Modules	1	2	3	4	5	6
Battery System Capacity	5.12kWh	10.24kWh	15.36kWh	20.48kWh	25.6kWh	30.72kWh
Dimension (W*D*H)	570*375*250.5	570*375*450.5	570*375*650.5	570*375*850.5	570*375*1050.5	570*375*1250.5
Weight	46kg	92kg	138kg	184kg	230kg	276kg
Cell Technology	Li-ion(LFP)					
Nominal Voltage	51.2V					
Operating Voltage Range	45.6~56.2V					
Scalability	Max.6 in one cluster, Max.15 in parallel operation					
Installation	Floor stand					
Depth of Discharge	90%					
Charge/ Discharge Current (Recommended)	50A					
Charge/ Discharge Current (Max)	100A					
Cooling Method	Natural convection					
Communication Port	RS232, RS485, CAN					
Protection Class	IP65					
Environment	Indoor or Outdoor Eaves					
Charging Temperature	-20°C~55°C (with heating) 0°C~55°C (without heating)					
Discharging Temperature	-20°C~55°C					
Humidity	5%~95%					
Max. Operating Altitude	2,500m					
Wi-Fi Module	Built in Wi-Fi module, APP OTA function					
Extended Functions	Thermal aerosol fire extinguishing device (standard) / Heating system (optional)					
Certificates	IEC62619 / IEC61000 / CE / UN38.3 / MSDS					

Each Single Battery Module Specification

Battery Module Model	STE-BGO-5120
Battery Cell Capacity	100Ah
Configuration	1P16S
Battery Module Capacity	5.12kWh
Battery Module Voltage	51.2V
Battery Module Weight	46 kg
Battery Module Dimensions(W*D*H)	570*373.3*200 (mm)




2. SAFETY INFORMATION

2.1 General Safety

Please carefully read the manual safety precautions and observe all the safety instructions on the equipment and in this document.

The "DANGER", "WARNING", and "NOTICE" statements in this document do not cover all the safety instructions. They are only supplements to the safety instructions.

For user safety and utilization efficiency of this manual, a list of symbols is designed to alert people from danger. You must understand and comply with the emphasized information to avoid personal injury and property damage. Relative safety symbols have been listed below.

 Danger	DANGER indicates a hazardous situation which, if not avoided will result in serious injury and/or fire.
 Warning	WARNING indicates a hazardous situation which, if not avoided, will result in property loss and/or void the warranty.
 NOTICE	NOTICE indicates normal situation which, if not avoided, will result in damage to the battery.

NOTICE

Follow local laws and regulations when installing, operating, or maintaining the equipment. The safety instructions in this document are only supplements to local laws and regulations.

2.2 Personal Safety

Personal Requirements

People who plan to install or maintain battery equipment must be trained, understand all necessary safety precautions, and are able to correctly perform all operations.

Only qualified professionals or trained people are allowed to install, operate, and maintain the equipment.







▲ DANGER

- Do not place battery in an area accessible by children or pets.
- Do not touch the energized battery, the temperature of the battery enclosure may increase during operation.
- Do not touch the energized battery terminals.
- Do not stand on, lean on, or sit on the battery.

2.3 Electrical Safety

Symbols on Battery

There are some electrical symbols on battery relate to electrical safety. Please make sure you have fully understood them before installation.

	Electrical danger	Voltage exists when the battery is powered on. Only qualified engineers are allowed to operate.
	Earth connector	Earth connection.
	DC positive and negative connectors	Identify positive and negative connectors of DC power source.
	CE mark	The product meets CE certification.
	WEEEtag	Batteries must not be disposed with general waste. It must be appropriately recycled in accordance with local regulations.
	Recycle	Batteries can be recycled, please refer to your local regulations regarding the correct disposal methods.

Electrical Safety

⚠ DANGER

- Before installation, ensure that the equipment is intact. Otherwise, electric shocks or fire may occur.
- Do not connect or disconnect power cables when battery is power-on. Which may cause electric arcs and sparks more over fire or personal injury.
- Before connecting a power cable, check the positive or negative connectors are correct.
- Do not parallel connection with different batteries.
- Do not connect battery with AC directly.
- Do not connect battery with PV wiring directly.
- Do not connect battery to faulty or unqualified inverter or charger.
- Do not create short circuits with the external connection.
- Make sure the grid is cut off and the battery is powered off before maintenance.
- Make sure the earth cable is connected correctly before operation.

⚠ WARNING

- Recharge battery in every six months if not in use.
- Recharge battery within 10 days after battery is fully discharged(SOC=0%).
- Ensure battery cable is installed correctly.
- When the battery is being installed or repaired, ensure the battery is powered off and and isolated. Using a multimeter check to ensure there is no voltage in the positive and negative terminals.

⚠ CAUTION

- Please use appropriately insulated tools for installation and maintenance.
- Please check the LED status when the battery is powered on.

- Please ensure the communication cable is connected correctly between the battery and the inverter.
- Please check for inverter alarms and the SOC reading once communication is established between the inverter and the battery.

Environment Safety

⚠ WARNING

- Ensure the battery is installed in a dry and well-ventilated location.
- The installation position must be away from direct sunlight and rain.
- The installation position must be far away from potential sources of fire..
- The installation position must be far away from all sources of water.
- Do not install the equipment in locations that contain flammable gases and/or flammable liquids.
- The operation and service life of the battery depends on the operating temperature. Operate the battery at a temperature equal to or better than the ambient temperature. The recommended operating temperature range is from 0°C to 30°C.


2.4 Transportation Safety

⚠ WARNING

- The products have passed UN38.3 certification.
- The products have MSDS documents available.
- The products belong to class 9 dangerous goods.
- **Please protect the packing case from the below situations:**
 - Being dampened by rains, snows, or falling into water.
 - Falling down or mechanical impact.
 - Being upside-down or tilted.

3.PRODUCT OVERVIEW

3.1 Brief Introduction

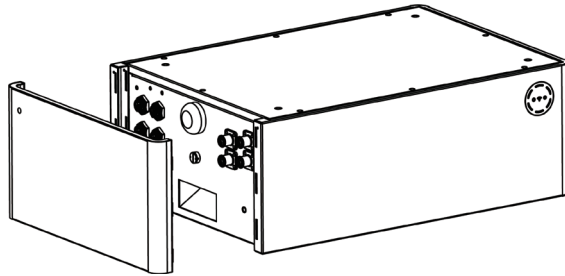


Focus-L2 is a lithium battery with an operating voltage range between 45.6~56.2V. It is designed for residential energy storage applications and works together with a low voltage hybrid inverter. **Focus-L2 is not suitable for supporting life-sustaining medical devices.**

Focus-L2 has built-in BMS(Battery Management System), which can manage and monitor cells information including voltage, current and temperature. Besides that, BMS can balance cells charging to extend cycle life. BMS has protection functions including over-discharge, over-charge, over-current and high/low temperature; the system can automatically manage charge state, discharge state and balance state.

Multiple Focus-L2 can be connected in parallel to expand capacity and power, 15 Focus-L2 can be connected in parallel at most.

Note: For multiple batteries in parallel, only the Master battery SOC LED will be on to show the whole system SOC level, slave battery SOC LEDs are off, but the Normal&Alarm LED will show normally.

3.2 Interface Introduction

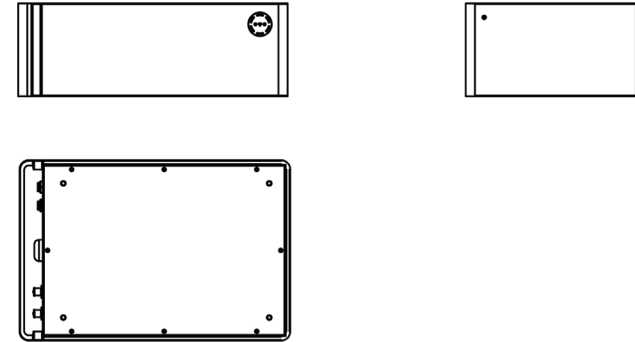

3.2.1 Switch ON/OFF

1. Switch ON

For single Battery Module, Long press (more than 3 seconds) ON/OFF button, Normal LED will be lighted in the front panel then battery will operate normally. L1 to L6 shows battery SOC, L7/L8 shows battery status.

For multiple Battery Modules in parallel, long press (more than 3 seconds) ON/OFF button of master battery (Which connect with inverter), normal LED will be lighted, battery system will automatically encode and assign ID to each slave battery, then battery system will operate normally.

2. Switch OFF

For multiple battery modules in parallel, press ON/OFF button of master battery (which connect with inverter) more than 3s, LED will flash in the front panel and then release the button, the master battery will shut down after all slave batteries shut down(Sleep mode).

For single battery module, Long press (more than 3s) ON/OFF button, LED will flash in the front panel and then release the button, the battery will shut down.

3.2.2 LED Indicator Definition

Note:

flash 1 - 0.25s light / 3.75s off

flash 2 - 0.5s light / 0.5s off

flash 3 - 0.5s light / 1.5s off

LED Indicators Instructions

Status		RUN	ALM	Battery Level Indicator						Descriptions	
				L6	L5	L4	L3	L2	L1		
Shut down	Sleep Mode	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	All OFF
Standby	Normal	Flash 1	OFF	According to the battery level						Indicates Standby	
	Alarm	Flash 1	Flash 3	According to the battery level						Indicates Module Undervoltage Alarm	
Charging	Normal	Light	OFF	According to the battery level						The highest capacity indicator LED flashes(flash 2), ALM LED does not flash during overcharge alarm	
	Alarm	Light	Flash 3	According to the battery level							
	Full Charged Protection	Light	OFF	Light	Light	Light	Light	Light	Light	Light	Turn to standby status when charger off
	Temperature, Overcurrent, Fault Protection	OFF	Light	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Stop charging
Discharging	Normal	Flash 3	OFF	According to the battery level							
	Alarm	Flash 3	Flash 3	According to the battery level							
	Under Voltage Protection	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Stop discharging
	Temperature, Overcurrent, Short Circuit, Failure Protection	OFF	Light	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Stop discharging
Fault		OFF	Light	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Stop charging and discharging

L9 ON: Wifi connected successfully/ L9 OFF: Wifi connection failed or power OFF.

Charging/Discharging Battery Level Indicators Instructions

Status	Charging						Discharging					
	L6	L5	L4	L3	L2	L1	L6	L5	L4	L3	L2	L1
Battery Level Indicator	Light	Light	Light	Light	Light	Light	Light	Light	Light	Light	Light	Light
Battery Level(%)	0%~17%	OFF	OFF	OFF	OFF	Flash 2	OFF	OFF	OFF	OFF	OFF	Light
	18%~33%	OFF	OFF	OFF	Flash 2	Flash 2	Light	OFF	OFF	OFF	OFF	Light
	34%~50%	OFF	OFF	OFF	Flash 2	Light	Light	OFF	OFF	OFF	Light	Light
	51%~66%	OFF	OFF	Flash 2	Light	Light	Light	OFF	OFF	Light	Light	Light
	67%~83%	OFF	Flash 2	Light	Light	Light	Light	OFF	Light	Light	Light	Light
84%~100%	Flash 2	Light	Light	Light	Light	Light	Light	Light	Light	Light	Light	Light
Running Indicator	Light						Flash 3					

3.2.3 COM/ LINK-IN / LINK-OUT Port

The COM Port is the interface between the battery and the inverter.

The inverter retrieves the battery data such as SOC, DOD, charge current via this connection.

CAN / RS485 connect to inverter, follow CAN / RS485 protocol.

RS232 Communication follow RS232 protocol, for manufacturer or professional engineer to debug or service.


PIN	Definition
Pin 1	RS485-B (to PCS, reserved)
Pin 2	RS485-A (to PCS, reserved)
Pin 3	GND_2
Pin 4	CANH (to PCS)
Pin 5	CANL (to PCS)
Pin 6	RS232_RX
Pin 7	RS232_TX
Pin 8	RS232_GND

LINK-IN/ LINK-OUT Port

LINK-IN/ LINK-OUT are used for the communication between battery piles.

The battery pack close to the inverter is the master, others are the slave pack.

4.INSTALLATION GUIDE

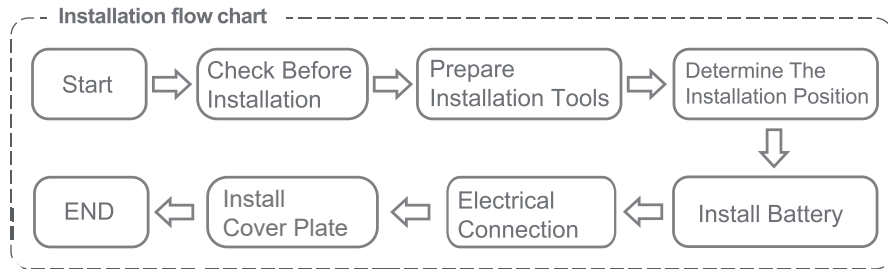

4.1 Checking Before Installation



 








4.1.1 Checking Outer Packing Materials




 







Packing materials and components may be damaged during transportation. Therefore, check the outer packing materials before installing the battery. Checking the surface of packing materials for damage, such as holes and cracks. If any damage is found, do not unpack the battery and contact the dealer as soon as possible.

4.1.2 Checking Deliverables











After unpacking the battery, check whether deliverables are intact and complete. If any damage is found or any component is missed, contact the dealer.

The below table shows the components and mechanical parts that should be delivered.

Focus-L2 Battery Box Packing List					
NO.	Part No.	Part name/size	Quantity	Photo	Used for
1	3.01.0295	Fixing plate between stacks V1.0_50*45_t=2.5mm_stainless steel	1		To fix the stacks
2	1.02.004	51.2V/100Ah Battery box	1		Battery box
3	3.01.0238	Crossed external hexagonal triple combination screws_M4*5mm_8.8 grade 304 stainless steel	4		To lock the fixing plate
4	3.01.0189	Flat locating pin10*20(M8*12)Iron_blackened	4		Used for positioning multiple packs
5	/	Communication cable V1.0_RJ45 crystal plug double elbow waterproof_UL CAT5E FTP 24AWG black_L=220mm	1		Communication cable for parallel of multiple packs
6	/	T568B Lan cable _Line length 2000mm_RJ45 crystal plug	1		Communication cable between master pack and inverter
7	/	Positive power cable plug RCL21X-120-25 orange plug	1		To parallel with multiple packs
8	/	Negative power cable plug RCL21Y-120-25 black plug	1		To parallel with multiple packs
9	/	RCL21X-120-25 red 4AWG extra soft silicone wire with a wire length of 1500mm-SC25-10 terminals	1		Power cable +
10	/	RCL21X-120-25 black 4AWG extra soft silicone wire with a wire length of 1500mm-SC25-10 terminals	1		Power cable -
11	/	Yellow-green two-color grounding Cable	1		Grounding Cable

Focus-L2 Battery Box Packing List					
NO.	Part No.	Part name/size	Quantity	Photo	Used for
12	/	Foot 60*M12*50mm	4		
13	3.01.0294	L type plate V1.0_60*70*30_t=2.5mm_stainless	2		
14	3.01.0133	Expansion bolt M8*80mm/8.8 grade /304 stainless steel expansion screws	2		Lock wall pendant
15	3.01.0034	Screw Cross outer hexagon three combination screws _M6*15mm_8.8 grade 304 stainless steel	1		Grounding screw
16	3.01.0212	Cross screw with outer hexagon_M8*15mm_8.8 level 304 stainless	2		To fix the support frame
17	/	304 Stainless Steel Cup Head Hexagon Socket Set Screws(M4*50)	1		Installation of decorative cover
18	/	Flat gasket M8 * 20 * 1.5mm_8.8 grade 304 stainless steel	2		Accessory gasket
19	3.01.0069	RJ45 Crystal head	2		RJ45 Crystal head
20	3.01.0094	Desiccant 2g moisture-proof desiccant	2		Moisture-proof
21	/	Outgoing Inspection Report	1		Outgoing Inspection Report
22	/	Battery Networking Guide	1		Battery Networking Guide

4.2 Tools

Tools			
Installation	Knife 	Measuring tape 	Socket wrench (10/16mm) 
	Rubber mallet 	Cross Screwdriver 	Hammer Drill(12mm) 
Protection	ESD gloves 	Safety goggles 	Anti-dust respirator 
	Safety shoes 		

4.3 Installation environment requirements



- **Recommended:** Install the battery in the indoor environment.
- Place battery in secure location away from children and animals.
- Do not place the battery near any heat sources and avoid sparks.
- Do not expose the battery to moisture or liquids.
- Do not expose the battery to direct sunlight.

4.3.1 Installation carrier requirements


- Only mount battery on fire resistant building. Do not install batteries on flammable buildings.
- Battery is quite heavy, make sure the wall/ground can meet the load bearing requirements.

4.4 Installation Instructions

4.4.1 Dimensions

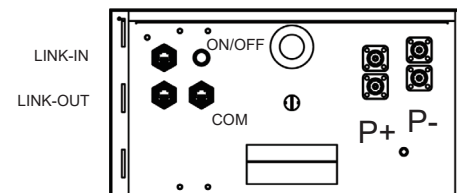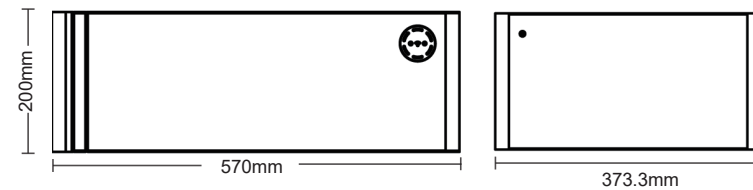


4.4.2 Installation Procedure

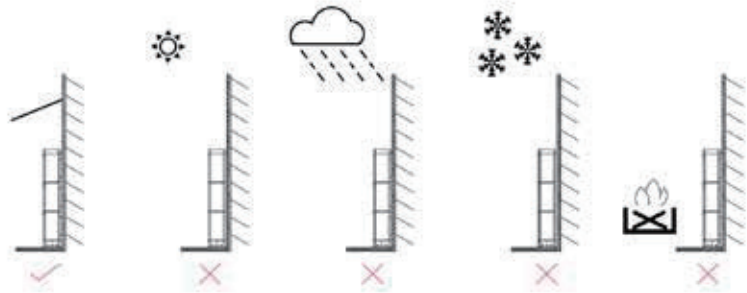

Note: Ensure the installation surface is flat and capable of supporting the total weight of the battery system.


STEP 1

Place the battery vertically on the ground and install four support feet.

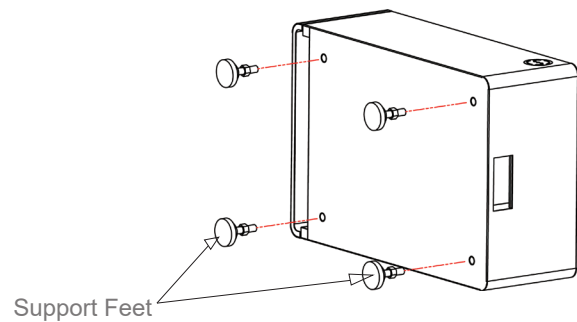

STEP 2


Place the battery against the wall and horizontally on the ground. Screw the locating pin into the battery.

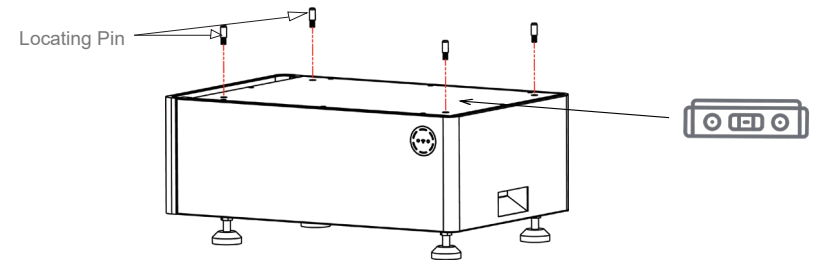

Note: Levelness of the base is less than 2mm.


STEP 3

Put the next battery module on top of the first module and secure the battery modules. Repeat this step until all battery modules have been installed.

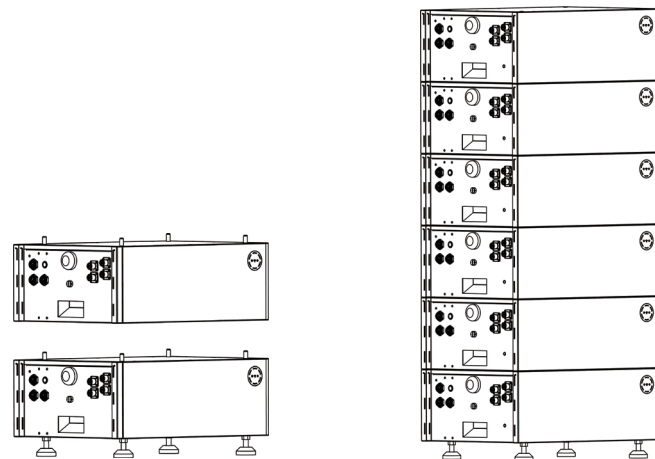

STEP 4


Connect the fixing plate between each battery module as follows.

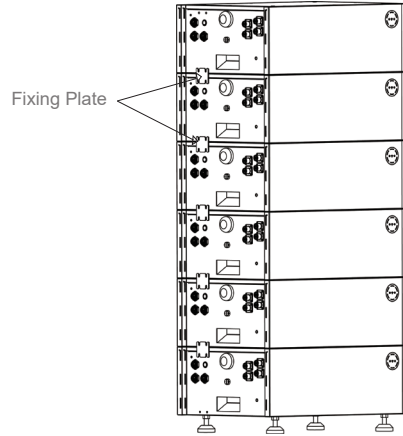

STEP 5


Attached the L-shape support frame onto the top battery module as shown below.

Drill two holes in the wall and insert four screw plugs. Insert four screws to secure the L-shape support frame to the wall and the battery.

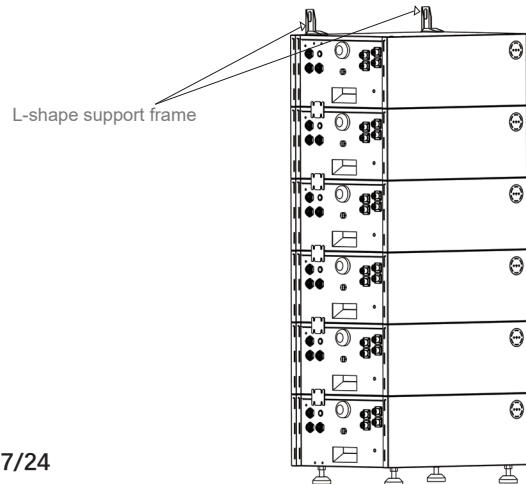

STEP 6

Connect the power cables and communication cables.

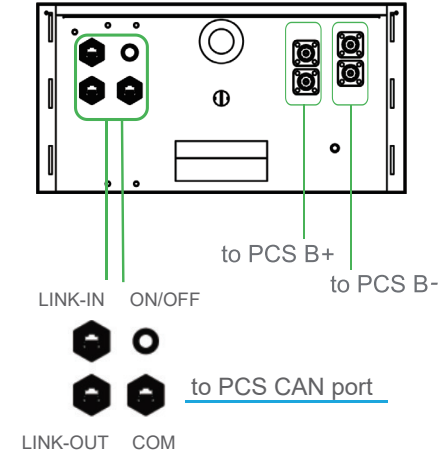


STELTEC

STEP 7


1. Load power exceeding 5kW requires at least 2 units Parallel operation.
2. The maximum number of Number of one cluser is 6. The maximum number of Number of parallel machines is 15. The power of the inverter selected for the battery module must be less than the maximum output power of the battery module.

Parallel operation	Load power	Connection mode
1unit	Below 5kW	7.1
2-15units	5kW or Below	7.2
2-15units	Over 5kW	7.3

⚠ Warning	
7.1	Wiring method of 1 unit module with power below 5kW.

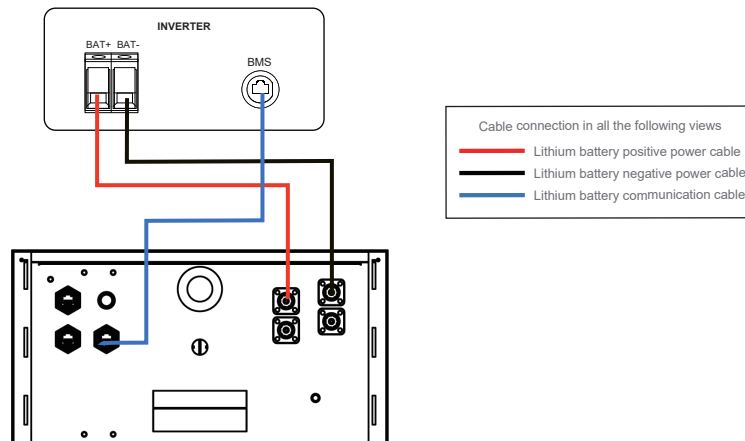


⚠ Warning	
7.2	For 2 units -15 units is-layer module with power 5kW or below. (The number of units in the middle of the diagram is omitted, the length of the two positive and negative poles connecting lines must be the same.) All connection cables between the inverter and the battery must be kept at equal length to maintain proper system balance and reliable operation.

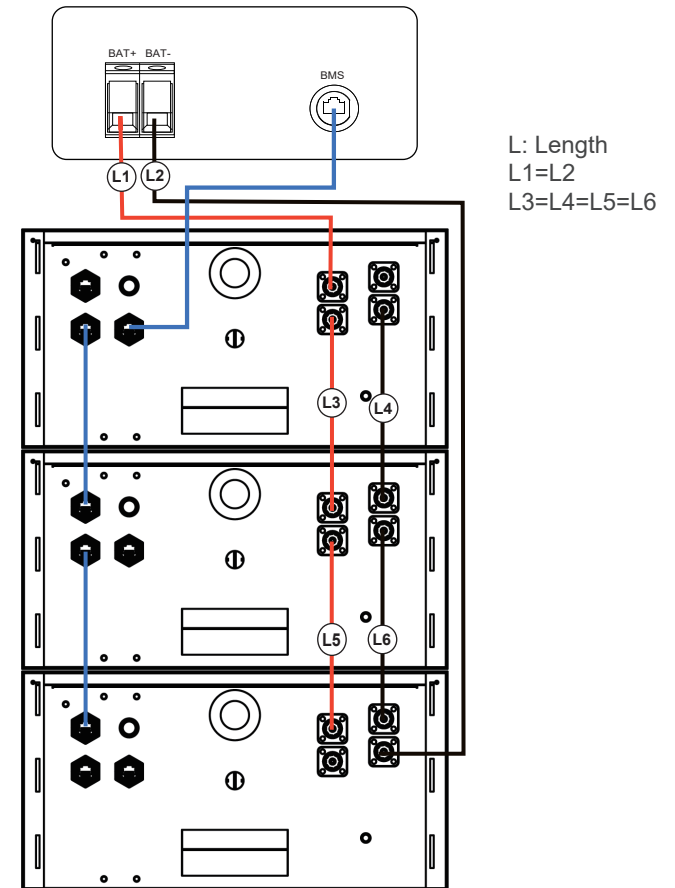

7.3


Warning


When using an inverter of above 5kW, the positive and negative ports of each battery must be connected to the combiner cabinet in the wiring method shown in the figure below.
 For 2 units -15 units is Over 5kW.
 (The number of units in the middle of the diagram is omitted. In order to ensure equal current flow, the length of the positive and negative poles connecting lines must be the same.

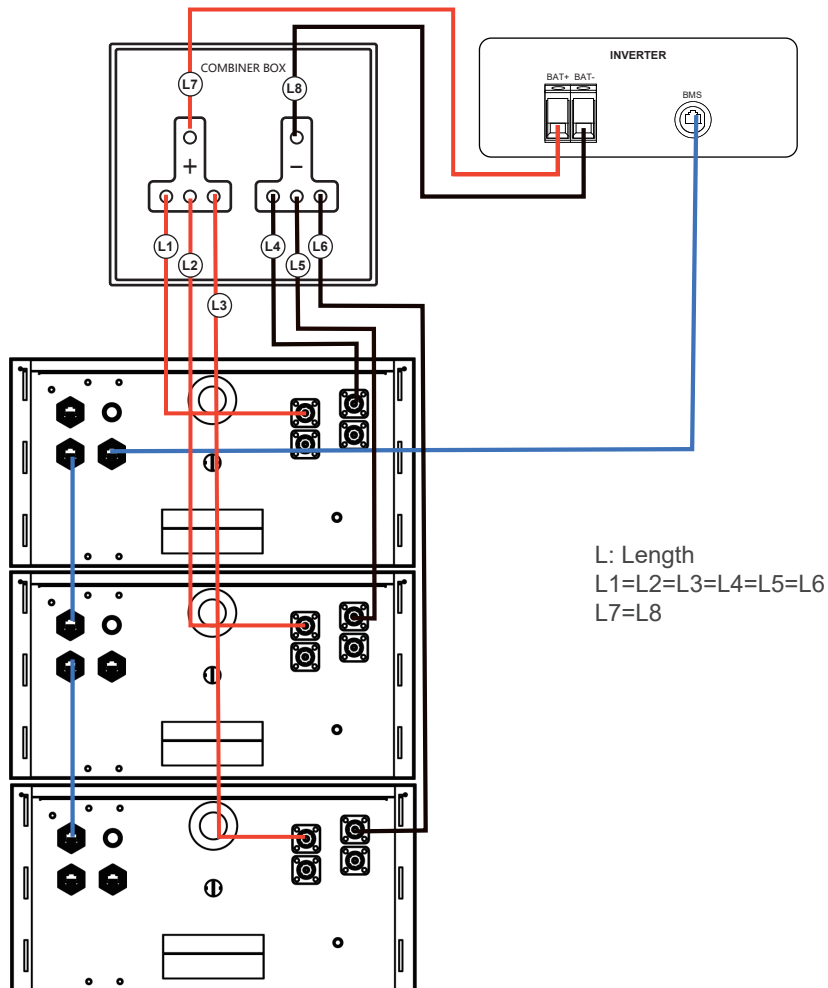

STEP 8

After completing all wiring, install the cover plate and secure it to the battery using M4 screws (insert into the side groove).
 Installation is complete.

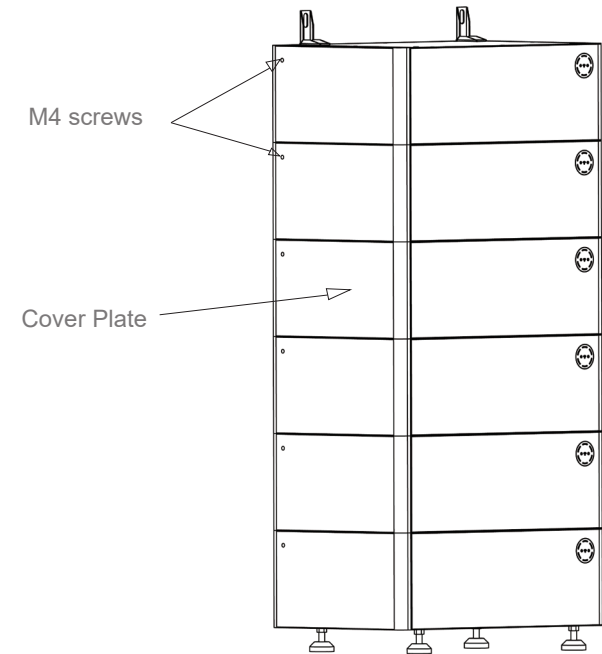

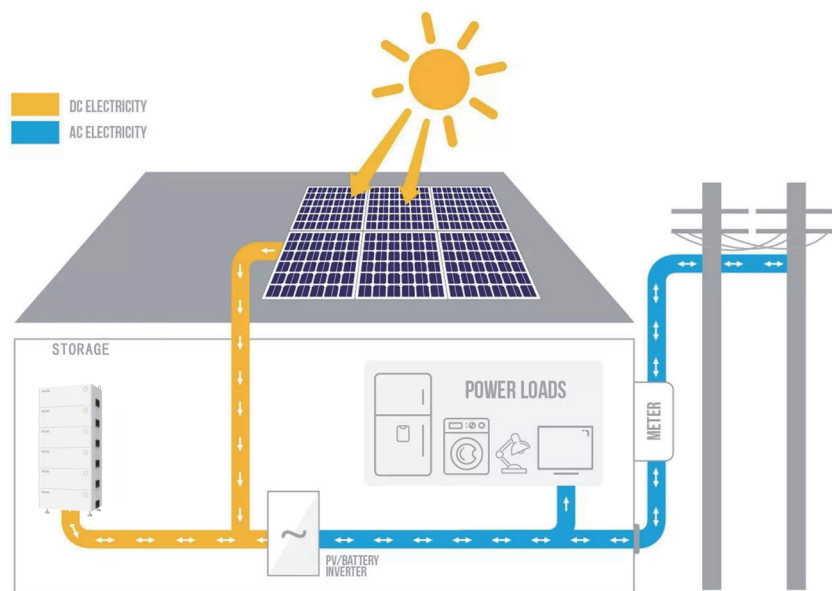

5. Commissioning Procedure

After all the cable (power and communication) connections are completed, please ensure the following:

- Ensure the DC switch on the inverter is OFF
- Ensure the AC switch that is connected to the grid and EPS output (if used) of the inverter is OFF
- Ensure the DC switch is OFF

For commissioning we recommend the following steps:

- Turn the DC switch ON
- Refer to section 3.2.1 Start for turning on the battery.
- Wait until the LED's on
- Wait until the inverter ED's on
- Turn the DC switch on the inverter ON
- Turn the AC switch that is connected to the grid and EPS output of the inverter ON
- Set-up the battery and the inverter using the App

6.MAINTENANCE

6.1 Recharge Requirements During Normal Storage

Battery should be stored in an environment with temperature range between -10°C ~+45°C, and maintained regularly according to following table with 0.5C (50A) current till 50% SOC after long storage time.

Recharge Conditions When In Storage

Storage Environment Temperature	Relative Humidity of Storage Environment	Storage Time	SOC
Below -10°C	/	prohibit	/
-10~25°C	5%~70%	≤12 months	30%≤SOC≤60%
25~35°C	5%~70%	≤6 months	30%≤SOC≤60%
35~45°C	5%~70%	≤3 months	30%≤SOC≤60%
Above 45°C	/	prohibit	/

6.2 Recharge Requirements When Over Discharged

Over discharged (90% DOD) battery should be recharged according to following table, otherwise over discharged battery will be damaged.

Recharge conditions when battery is over discharged

Storage Environment Temperature	Storage Time	Note
-10~25°C	≤15 days	Battery Pack disconnected from PCS
25~35°C	≤7 days	
-10~45°C	<12 hours	Battery Pack connected to PCS